


## INTERCHANGEABLE WALL CAP - FRESH AIR KIT INSTALLATION

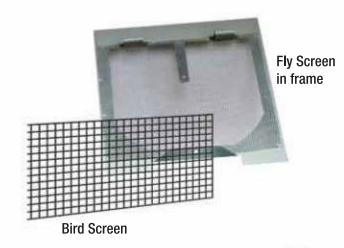

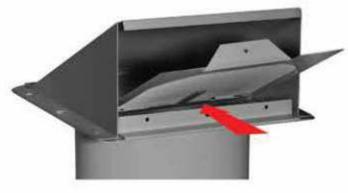

STEP 1: Insert Fly Screen as shown

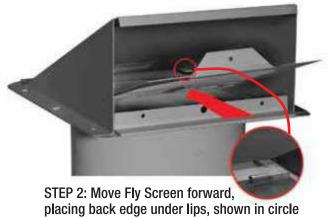



STEP 3: Move Fly Screen backward, placing back edge under front partition



STEP 4: Line up screw holes & secure Fly Screen with screw



STEP 5: Insert Bird Screen as shown



STEP 6: Secure Bird Screen with st. steel screws



FINAL: FRESH AIR WALL CAP READY FOR USE



## INTERCHANGEABLE WALL CAP - EXHAUST AIR KIT INSTALLATION



Bird Screen (not recommended for dryer exhaust)



STEP 1: Insert Draft Damper as shown



STEP 2: Move Damper forward, placing back edge under lips, shown in circle



STEP 3: Move Damper backward, placing back edge under front partition



STEP 4: Line up screw holes & secure damper with screw



STEP 5: Insert Bird Screen as shown (Bird Screen is not recommended for dryer exhaust)



STEP 6: Secure Bird Screen with st.steel screws



FINAL: EXHAUST AIR WALL CAP READY FOR USE

